





Thule Rapid System Kit 1443

> Instructions

LAND ROVER Freelander 2, 5-dr SUV, 07-14

LAND ROVER LR2, 5-dr SUV, *07-14

*North America

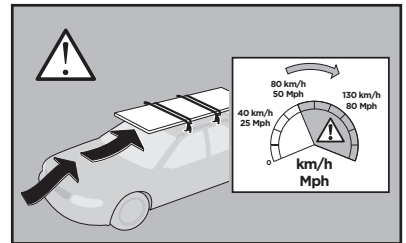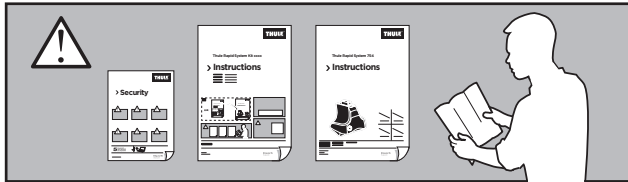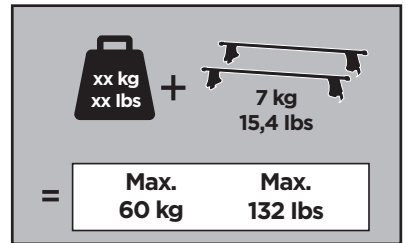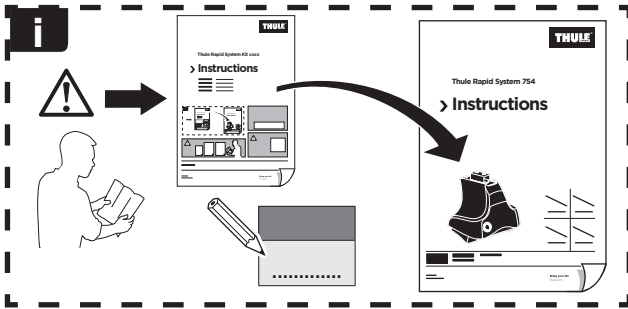


ISO 11154-E




x1

225 x4





890 x4



x1

1

	X (scale)	X (mm)	X (inch)
LAND ROVER Freelander 2 , 5-dr SUV, 07-14	45,5	1106	43 1/2
LAND ROVER LR2 , 5-dr SUV, *07-14	45,5	1106	43 1/2

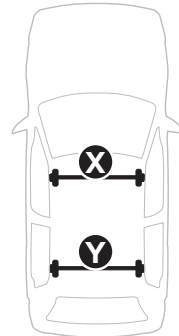
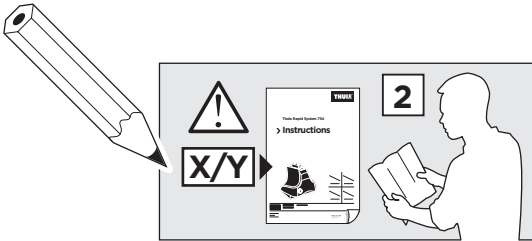


	Y (scale)	Y (mm)	Y (inch)
LAND ROVER Freelander 2 , 5-dr SUV, 07-14	42,5	1076	42 3/8
LAND ROVER LR2 , 5-dr SUV, *07-14	42,5	1076	42 3/8



2

LAND ROVER Freelander 2, 5-dr SUV, 07-14

LAND ROVER LR2, 5-dr SUV, *07-14

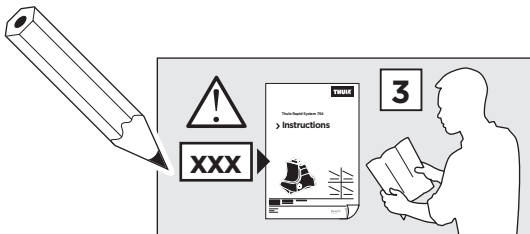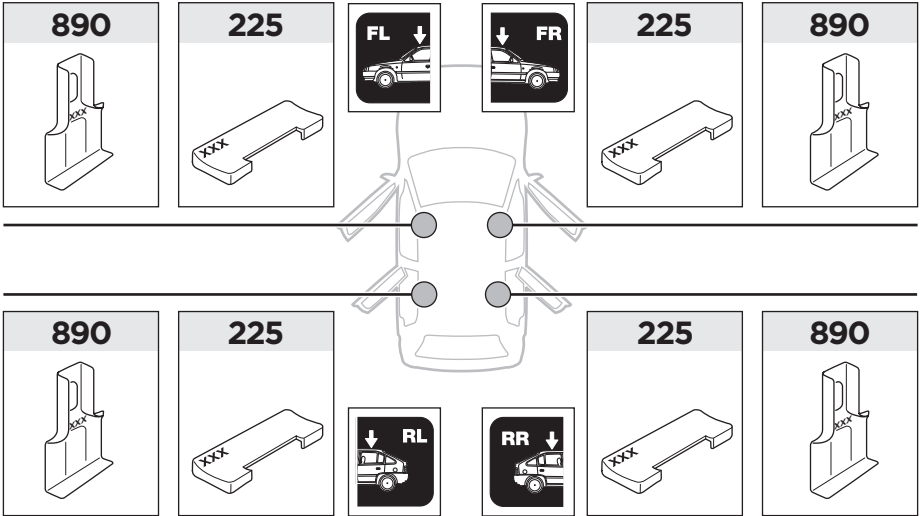

3

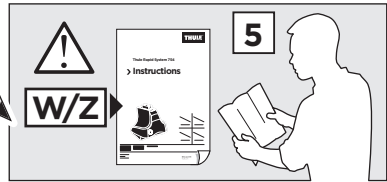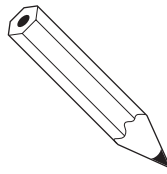

	W (mm)	Z (mm)	W (inch)	Z (inch)
LAND ROVER Freelander 2 , 5-dr SUV, 07-14	310	700	12 1/4	27 1/2
LAND ROVER LR2 , 5-dr SUV, *07-14	310	700	12 1/4	27 1/2

