
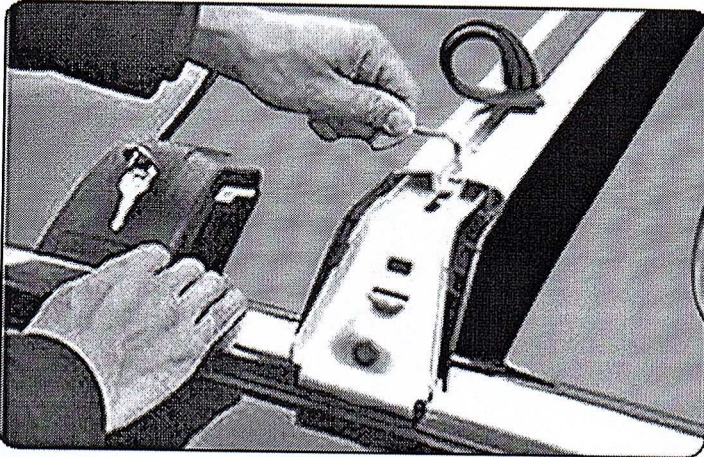


Installation Manual

Item No.: 8183

**Pls make sure the longer bar install front, short bar install rear (if different length)

Professional! work for cars with roof flush rails.

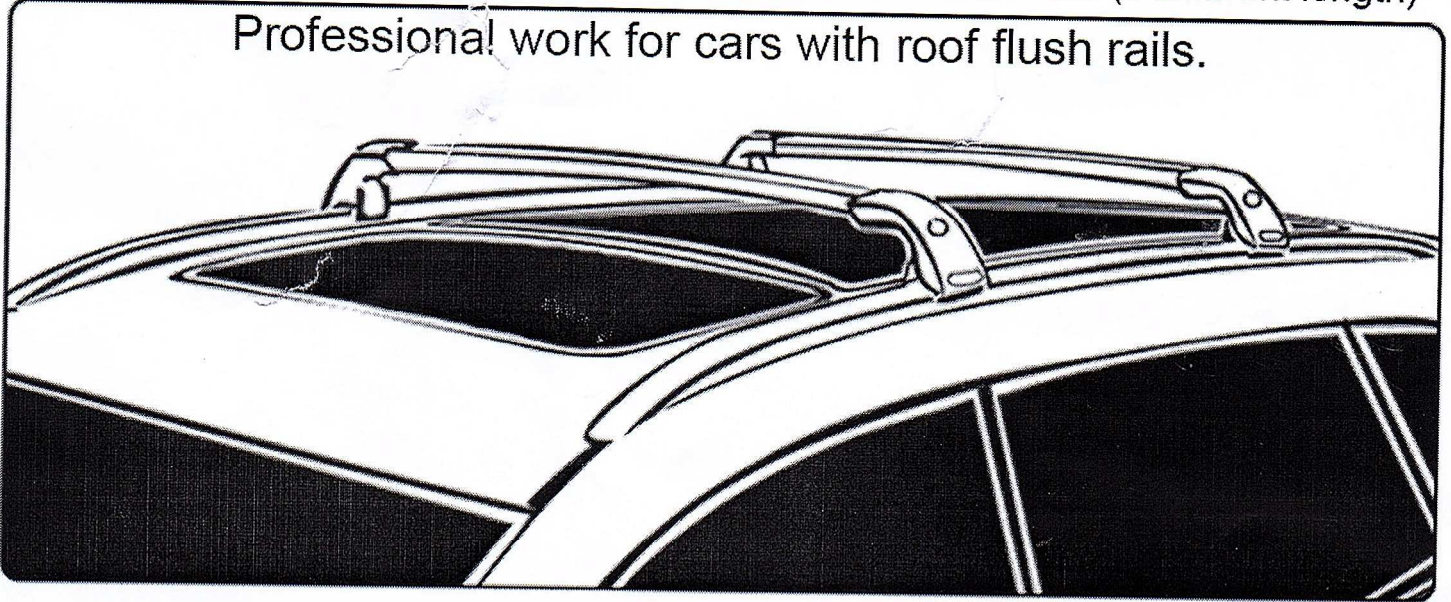


1. Pull out the black rubber, loosen 2 bolts for adjust bar length



2. Tighten the bar bolts and clamp bolts



3. Push the rubber back to aluminum bar

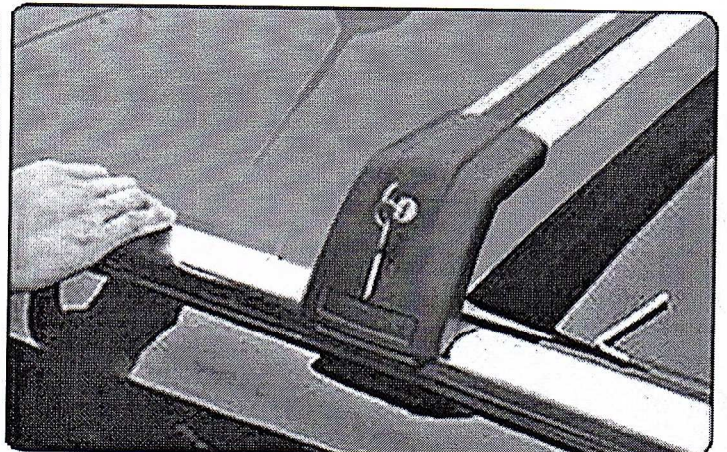

4. Lock the cover (L=left, R=right, find forwarder arrow at the bottom)