




INSTALLATION INSTRUCTIONS

DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE'S LAMP LOAD RATING, WHICHEVER IS LOWER

56229 USCAR REPLACEMENT VEHICLE END WITH 24" WIRES

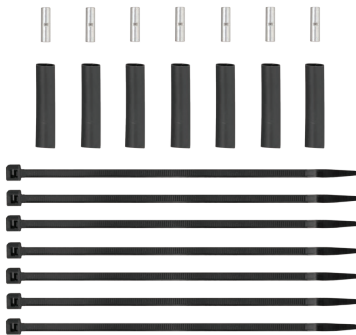

TOOLS NEEDED

- Wire stripper
- Crimping tool
- Heat gun


WARNING

Avoid heating the gas tank, fuel lines, brake lines or other flammable materials when heating the heat shrink.

INSTALLATION


Step 1

Strip the insulation to reveal 0.25" of bare wire (A).

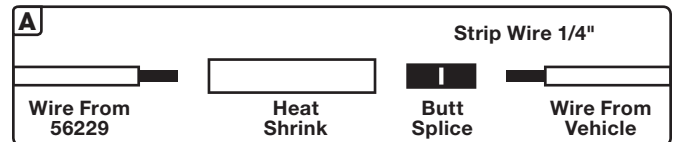


Step 2

Place the heat shrink on the wire as shown below (B). Crimp the butt splice.

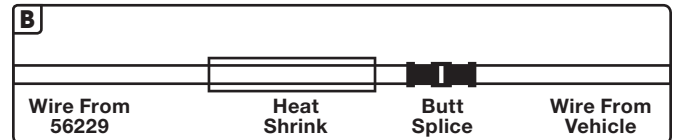

Step 3

Position the heat shrink over the splice (C) and heat using a heat gun or similar device.

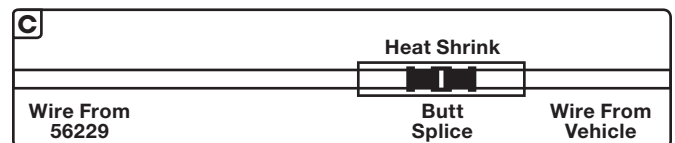

WIRING GUIDE

