



## Thule Rapid System Kit 1184

# > Instructions





**CITROËN Berlingo**, 3/4-dr Van, 97-02, 03-08

**CITROËN Xsara Picasso**, 5-dr MPV, 00-03, 04-12\*

**PEUGEOT Partner**, 3/4-dr Van, 97-02, 03-08

**PEUGEOT Ranch**, 3/4-dr Van, 97-02, 03-08

\* without sunroof

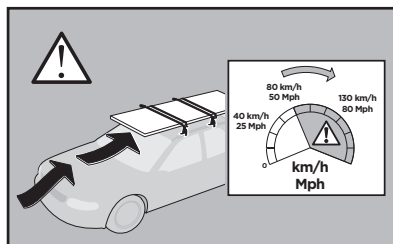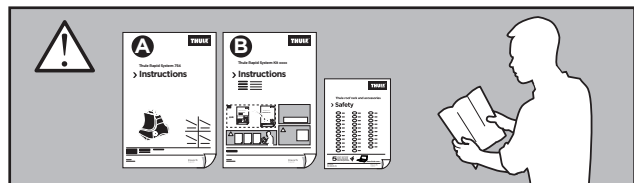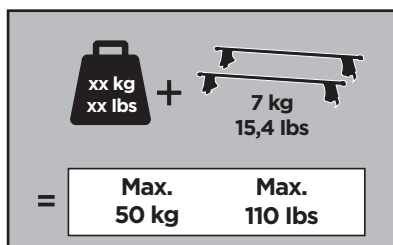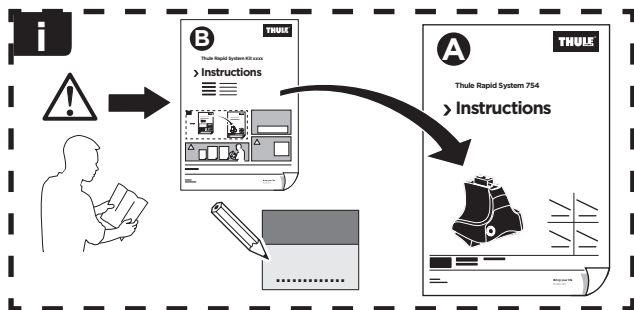


ISO 11154-E

141184  
C.20150920  
519-1184-02

Bring your life  
thule.com



346 x 4



22 x 4






x1



x1

1

	X (scale)	X (mm)	X (inch)
<b>CITROËN Berlingo</b> , 3/4-dr Van, 97-02, 03-08	23,5	886	34 <sup>7</sup> / <sub>8</sub>
<b>CITROËN Xsara Picasso</b> , 5-dr MPV, 00-03, 04-12	21	861	33 <sup>7</sup> / <sub>8</sub>
<b>PEUGEOT Partner</b> , 3/4-dr Van, 97-02, 03-08	23,5	886	34 <sup>7</sup> / <sub>8</sub>
<b>PEUGEOT Ranch</b> , 3/4-dr Van, 97-02, 03-08	23,5	886	34 <sup>7</sup> / <sub>8</sub>

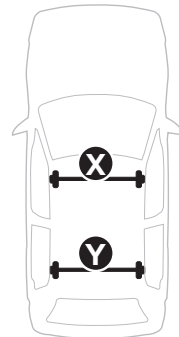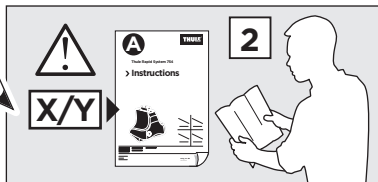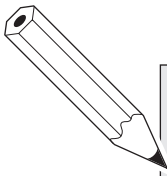

	Y (scale)	Y (mm)	Y (inch)
<b>CITROËN Berlingo</b> , 3/4-dr Van, 97-02, 03-08	24	891	35 <sup>1</sup> / <sub>8</sub>
<b>CITROËN Xsara Picasso</b> , 5-dr MPV, 00-03, 04-12	20	851	33 <sup>1</sup> / <sub>2</sub>
<b>PEUGEOT Partner</b> , 3/4-dr Van, 97-02, 03-08	24	891	35 <sup>1</sup> / <sub>8</sub>
<b>PEUGEOT Ranch</b> , 3/4-dr Van, 97-02, 03-08	24	891	35 <sup>1</sup> / <sub>8</sub>



2

**CITROËN Berlingo**, 3/4-dr Van, 97-02, 03-08


**CITROËN Xsara Picasso**, 5-dr MPV, 00-03, 04-12\*

**PEUGEOT Partner**, 3/4-dr Van, 97-02, 03-08




**PEUGEOT Ranch**, 3/4-dr Van, 97-02, 03-08

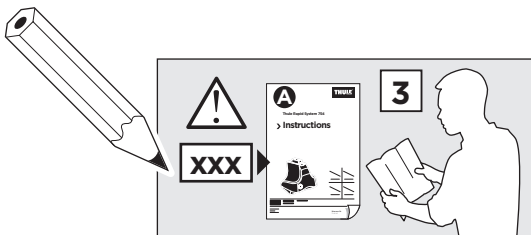
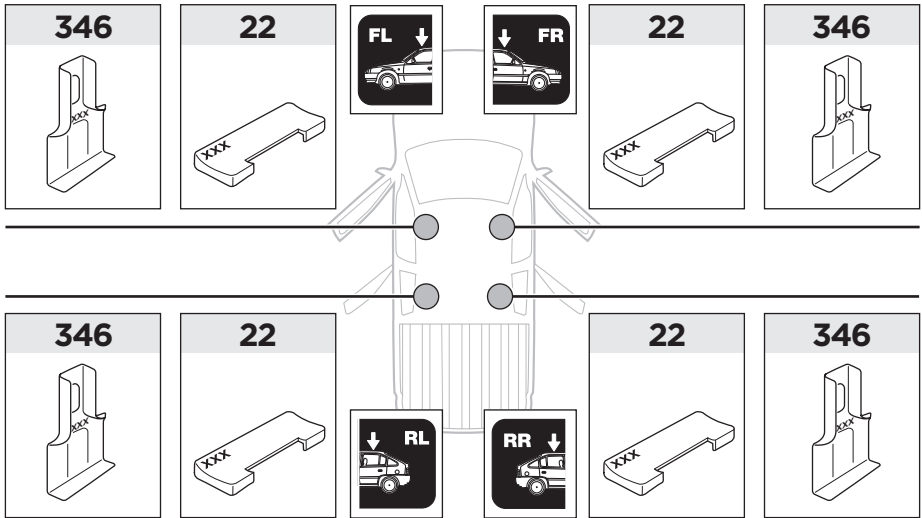




3

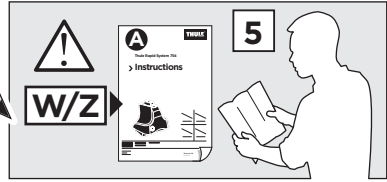

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>CITROËN Berlingo</b> , 3/4-dr Van, 97-02, 03-08	770	600	30 <sup>3</sup> / <sub>8</sub>	23 <sup>5</sup> / <sub>8</sub>
<b>CITROËN Xsara Picasso</b> , 5-dr MPV, 00-03, 04-12	320	700	12 <sup>5</sup> / <sub>8</sub>	27 <sup>1</sup> / <sub>2</sub>
<b>PEUGEOT Partner</b> , 3/4-dr Van, 97-02, 03-08	770	600	30 <sup>3</sup> / <sub>8</sub>	23 <sup>5</sup> / <sub>8</sub>
<b>PEUGEOT Ranch</b> , 3/4-dr Van, 97-02, 03-08	770	600	30 <sup>3</sup> / <sub>8</sub>	23 <sup>5</sup> / <sub>8</sub>

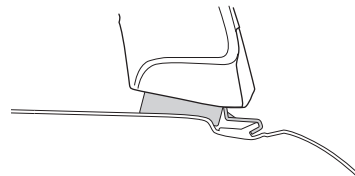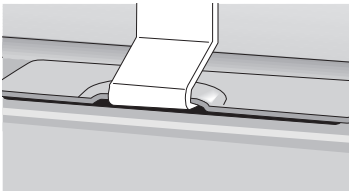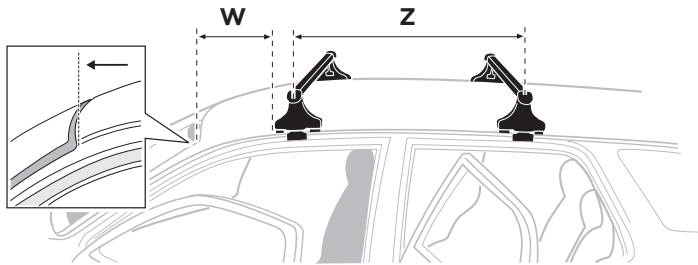


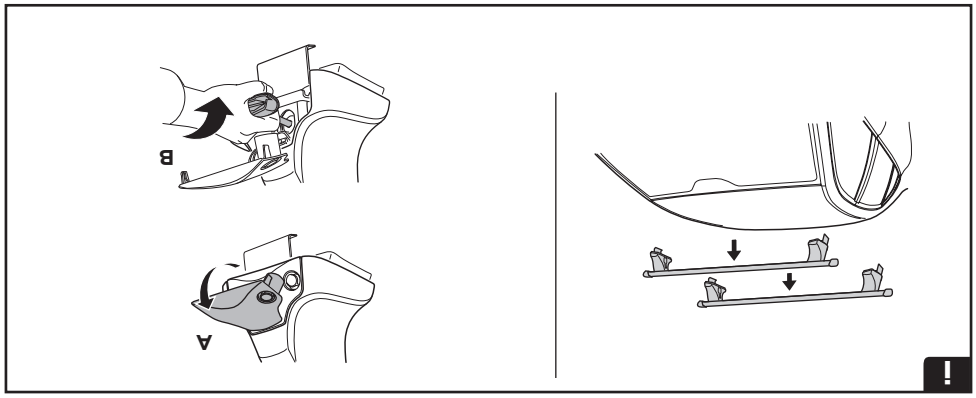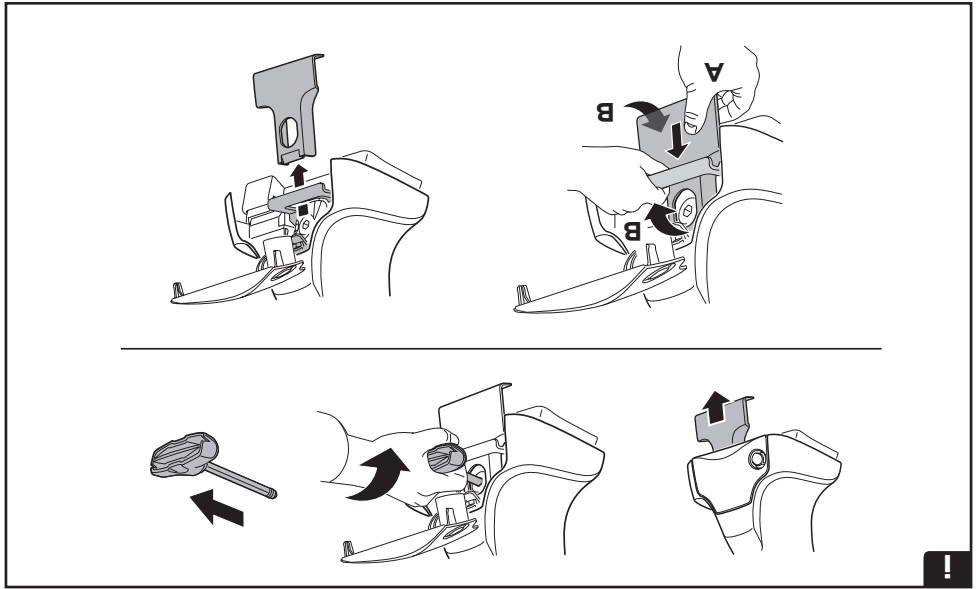


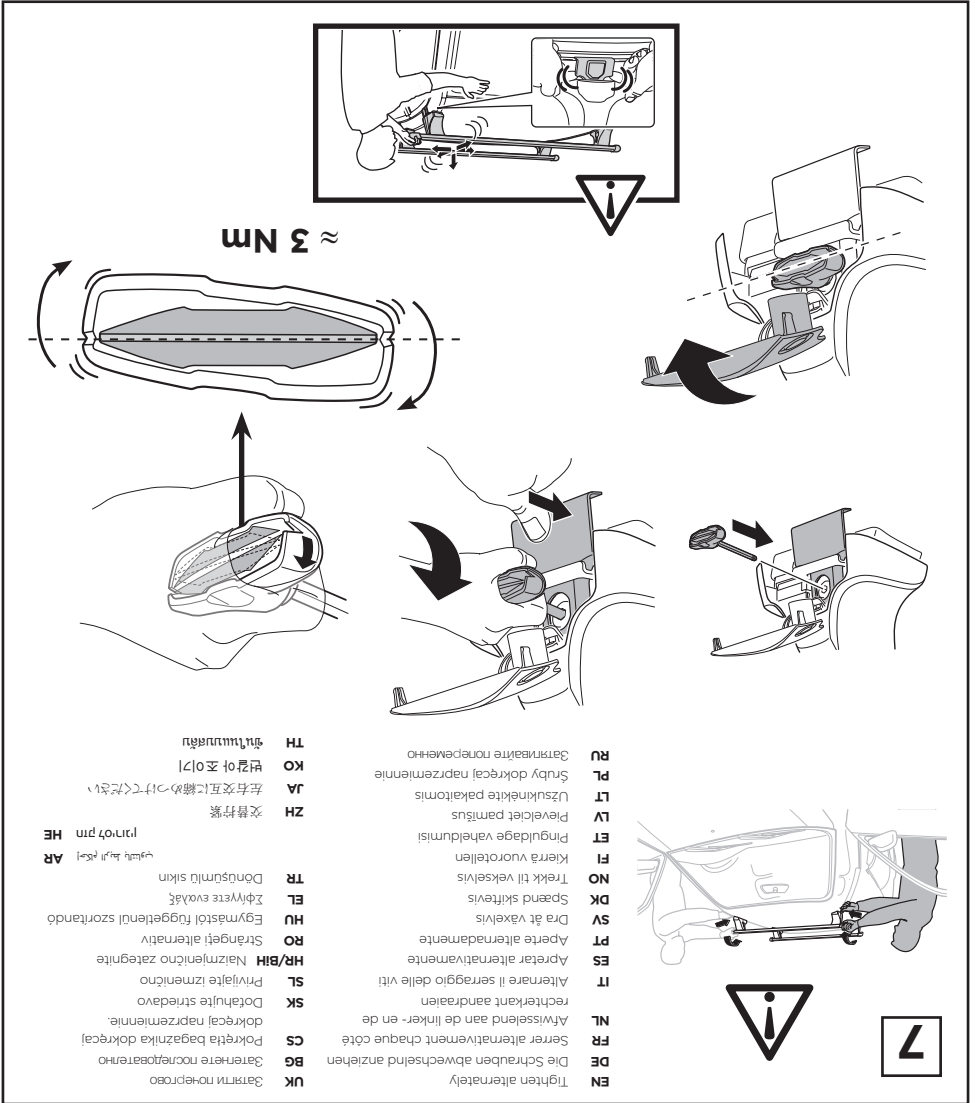
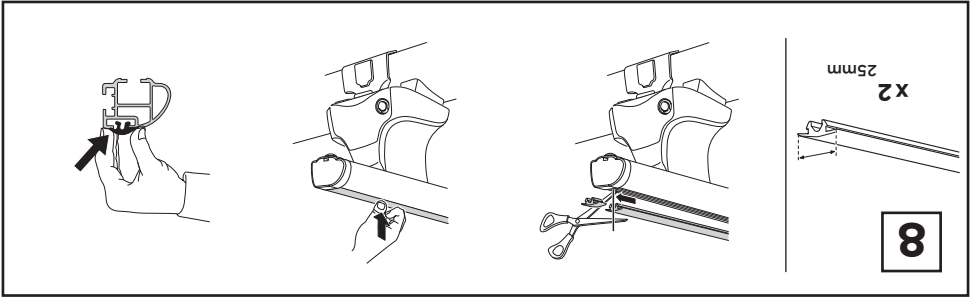


- UK Заміняти попарно
- BG Заменяте попарно
- FR Serrer alternativement chaque côté
- NL Afwisselend aan de linker- en de rechterkant aandraaien
- IT Alternare il serraggio delle viti
- ES Apertre alternativamente
- PT Aperte alternadamente
- SV Dra åt växelvis
- DK Spænd skiftevis
- NO Trekk til vekselvis
- FI Kierrä vuorotellen
- ET Pinguldage vaheldumisi
- LV Pieveicēt pamīšus
- LT Užsūkninkite pakaitomis
- PL Srdub dokrecal naprzemiennie
- RU Заменяйте попережно
- TH ផ្លាស់ប្តូររៀងរាល់
- KO 좌우 교대로
- JA 左右交互に締めつける
- ZH 交替拧紧
- HE פרוש' גרמ
- AR ٲرٲش' ٲرم
- TR Dönüşümü sikin
- EL Δφλυγτε εναλλάξ
- HU Egyarástól függetlenül szorítandó
- RO Strângeți alternativ
- HR/BIH Naizmjenično zategnite
- SK Dotáňujte štriedavo
- SL Privijajte izmenično

- EN Tighten alternately
- DE Die Schrauben abwechselnd anziehen
- FR Serrer alternativement chaque côté
- NL Afwisselend aan de linker- en de rechterkant aandraaien
- IT Alternare il serraggio delle viti
- ES Apertre alternativamente
- PT Aperte alternadamente
- SV Dra åt växelvis
- DK Spænd skiftevis
- NO Trekk til vekselvis
- FI Kierrä vuorotellen
- ET Pinguldage vaheldumisi
- LV Pieveicēt pamīšus
- LT Užsūkninkite pakaitomis
- PL Srdub dokrecal naprzemiennie
- RU Заменяйте попережно


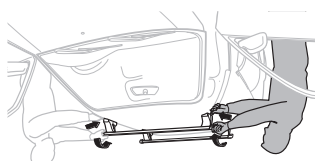


7



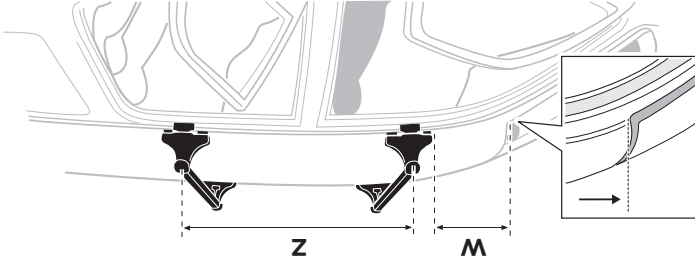
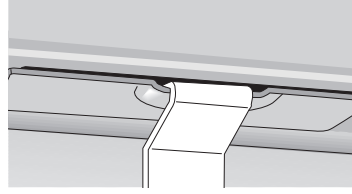
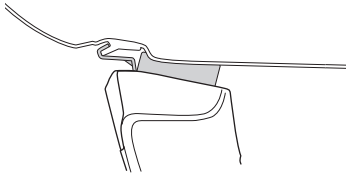


23 3/8	30 1/8	600	770	CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08
23 3/8	30 1/8	600	770	PEUGEOT Partner, 3/4-dr Van, 97-02, 03-08
27 1/2	12 5/8	700	320	CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-12
23 3/8	30 1/8	600	770	CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08


X mm    Y mm    X inch    Y inch

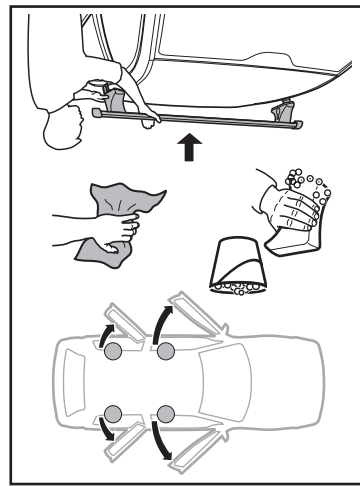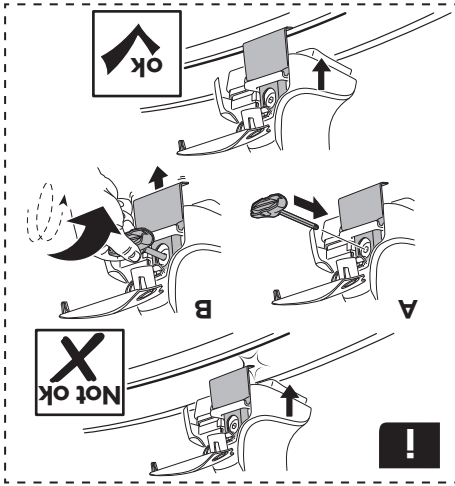


6

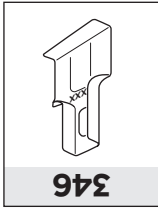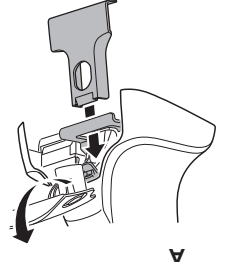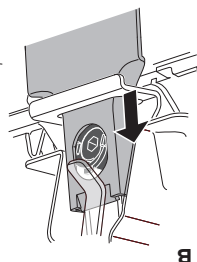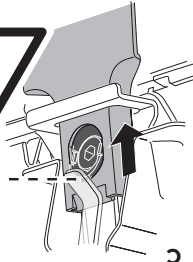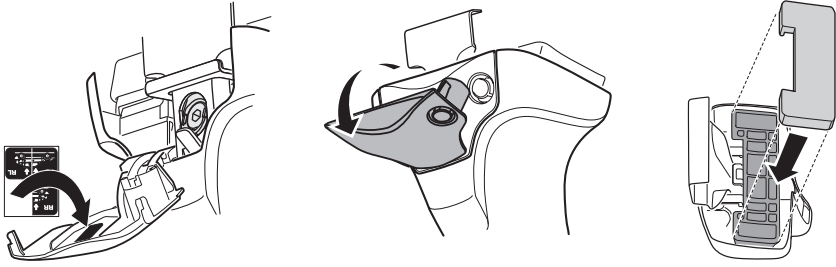


346

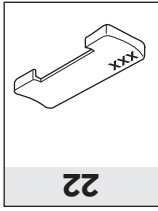


22

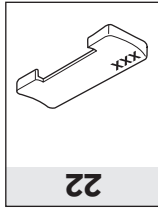


22

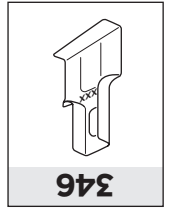


346

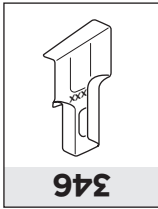


346

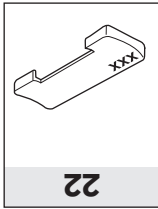

22

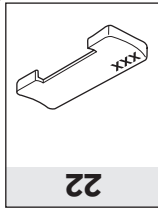


22

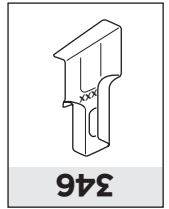

346




- CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08
- CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-12
- PEUGEOT Partner, 3/4-dr Van, 97-02, 03-08
- PEUGEOT Ranch, 3/4-dr Van, 97-02, 03-08



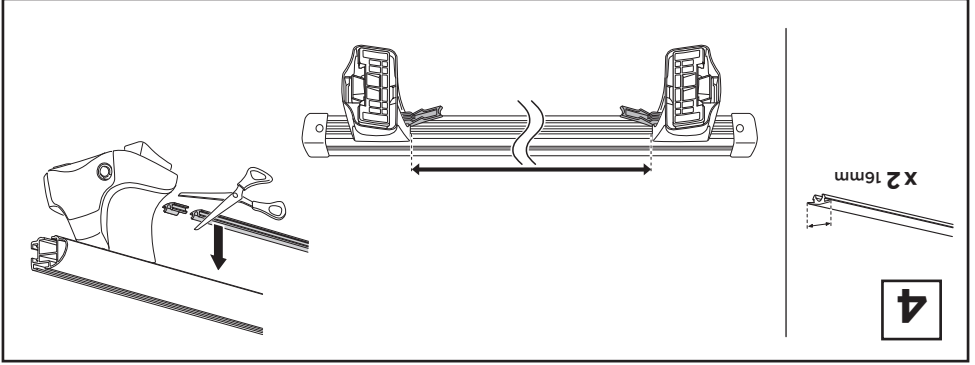


891	35 1/8	Y inch	CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08
891	35 1/8	Y inch	PEUGEOT Partner, 3/4-dr Van, 97-02, 03-08
851	33 1/2	Y inch	CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-12
891	35 1/8	Y inch	CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08







886	34 7/8	X inch	CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08
886	34 7/8	X inch	PEUGEOT Partner, 3/4-dr Van, 97-02, 03-08
861	33 7/8	X inch	CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-12
886	34 7/8	X inch	CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08

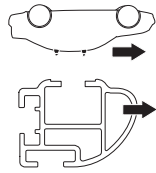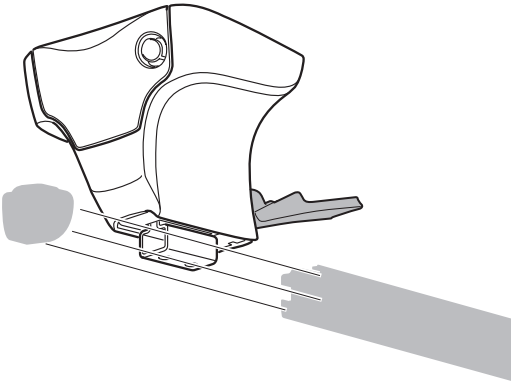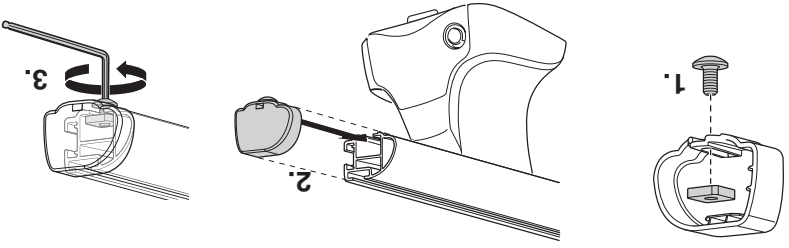

2

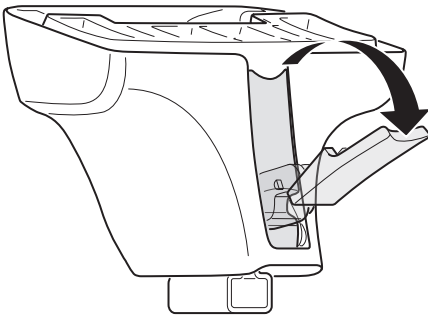

1

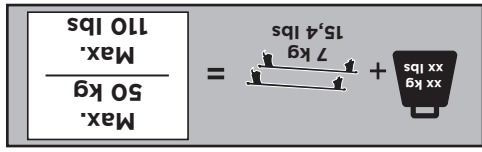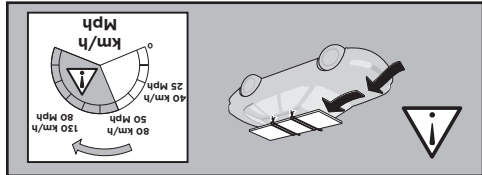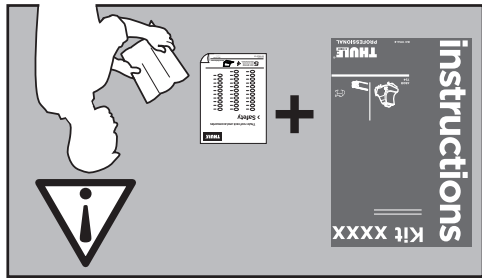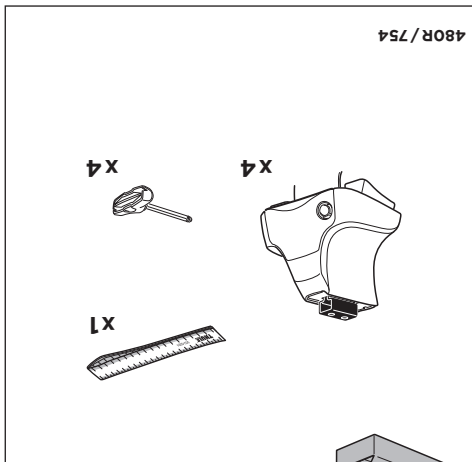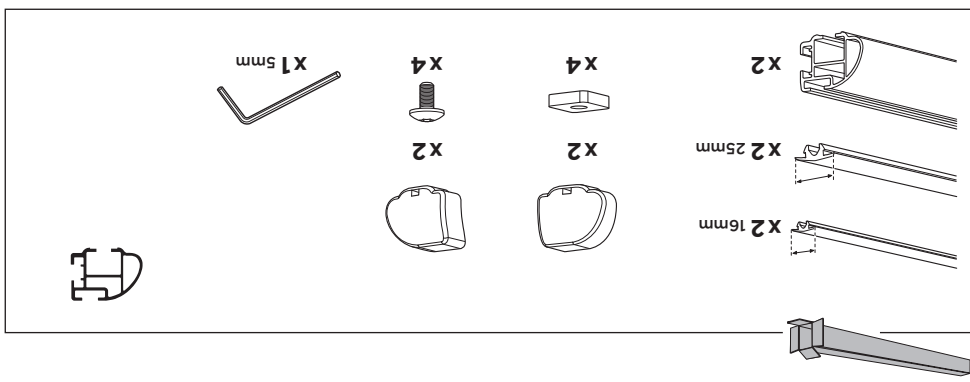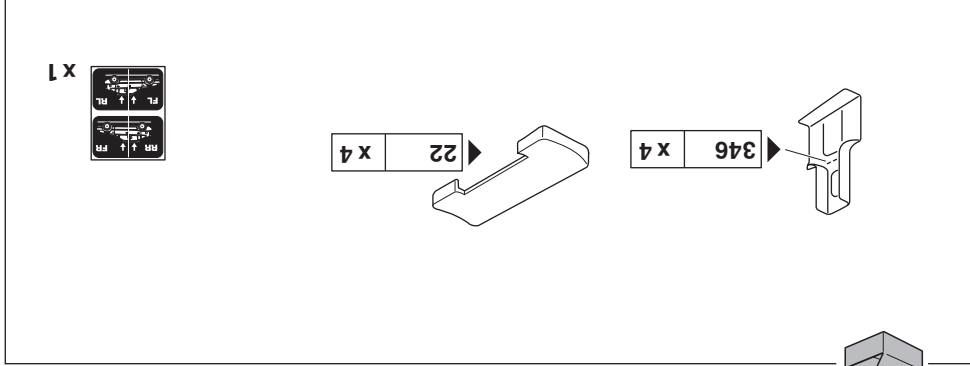


# instructions


# Kit 1184

CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08  
 CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-12\*  
 PEUGEOT Partner, 3/4-dr Van, 97-02, 03-08  
 PEUGEOT Ranch, 3/4-dr Van, 97-02, 03-08

\* without sunroof

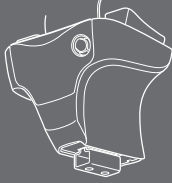

480R  
754



ISO 11154-E

PROFESSIONAL

**THULE**  
SWEDEN